

Installation Manual

March 19, 2026 2:05 PM

CELL-13-5CCT


Thank you for purchasing your new LED CELL-13-5CCT, Please take the time to read and understand the instruction sheet below. Failure to do so may void warranty.

Specifications

		(Switchable)							
Voltage:	240V AC	CCT:	2700K	3000K	4000K	5000K	5700K	Dimmable:	Yes*
Power:	13W	Lumen (±5%):	1002lm	995lm	1098lm	1163lm	1145lm	Operating Temp:	-20° - 45°C
CRI:	>90	IP Rating:	44	Beam Angle:	60°	Lifespan:	50,000hrs		

*Fully dimmable with suitable dimmers.

Minimum clearance distances to flammable building elements.

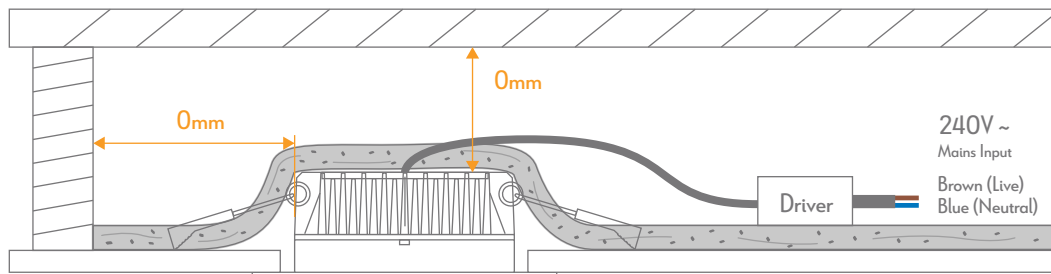

Notes:


The LED driver is NOT suitable for covering with insulation material.

Warning-Risk of overheating or fire if the clearance distances are compromised.

The diagram above illustrates the necessary clearance distance for IC-4 downlights.


To ensure the maximum lifespan of the downlight, Domus recommends a 20mm clearance for air transfer between the living space and the roof space.

Please note that Domus's 5 Year Residential Warranty will be shortened to 3 years if the downlight is installed without adequate air transfer on all sides.

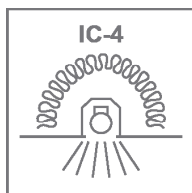


- IC-4 downlights can be used where air transfer is not permitted or not desired between living space and roof space (there will be no air transfer between spaces even if there is no insulation covering the luminaire).
- Building Insulation does not have to be non flammable.
- Building Insulation must maintain structural integrity at 90 degrees C.
- **Important: IC-4 Downlights are not to be used in the Fire Rated Applications.**


1. Push the module into the fitting

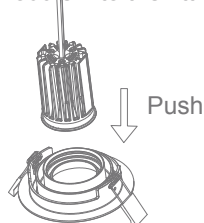


2. Connect the Driver

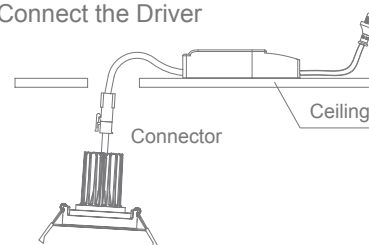

3. Straighten the springs into the ceiling

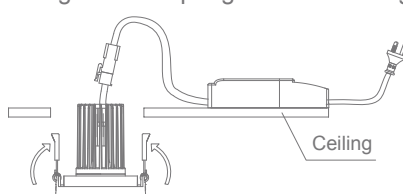

4.

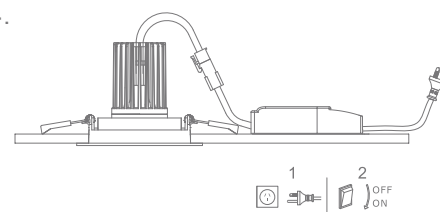

Note: -The lamp must be installed by professional electrician
-Ensure the power supply is switched off before fitting this product

-Do not touch the lamp when in use
-Keep away from hot steam and corrosive gas