

Installation Manual

February 23, 2026 11:37 AM

DECO-8-TRIO


Thank you for purchasing your new LED DECO-8, Please take the time to read and understand the instruction sheet below. Failure to do so may void warranty.

Specifications

Voltage:	240V AC	Lumen (±5%):	3000K - 700lm 4000K - 750lm 5700K - 800lm	Dimmable:	Yes*
Power:	8W	Beam Angle:	90°	Operating Temp:	-10° - 45°C
IP Rating:	44	CCT:	3000K - 4000 - 5700K (Switchable)	Lifespan:	50,000hrs
CRI:	>80	Cutout:	Ø70-75mm		

*Fully dimmable with suitable dimmers.

Minimum clearance distances to flammable building elements.

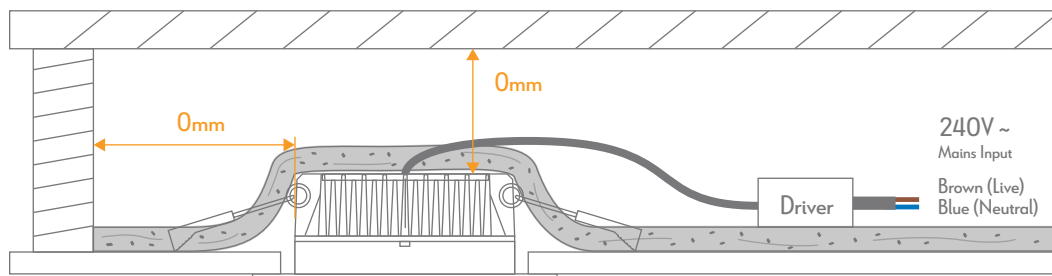

Notes:


The LED driver is NOT suitable for covering with insulation material.

Warning-Risk of overheating or fire if the clearance distances are compromised.

The diagram above illustrates the necessary clearance distance for IC-4 downlights.

To ensure the maximum lifespan of the downlight, Domus recommends a 20mm clearance for air transfer between the living space and the roof space.

Please note that Domus's 5 Year Residential Warranty will be shortened to 3 years if the downlight is installed without adequate air transfer on all sides.

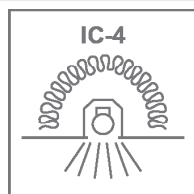

- IC-4 downlights can be used where air transfer is not permitted or not desired between living space and roof space (there will be no air transfer between spaces even if there is no insulation covering the luminaire).
- Building Insulation does not have to be non flammable.
- Building Insulation must maintain structural integrity at 90 degrees C.
- Important: IC-4 Downlights are not to be used in the Fire Rated Applications.

How to install:

- The LED downlight shall be installed in accordance to Australian/NZ electrical standards.
- The LED downlight shall be installed in locations and in conditions as described in the below figure.
- Please make sure all electricity is switched off at the main switch board before any electrical works are to commence.
- Cut out the hole according to the downlight cutout table.
- The LED driver is supplied with an Australian approved 2pin flex and plug.
- For easy maintenance Domus recommends the use of plug base sockets in the ceiling.
- If you are intending to hard wire the LED drivers please remove the supplied flex and plug from the LED driver.
- When connecting the LED lamp/down light to the LED driver please ensure the connecting plug is securely pushed in and the connection is not loose.

Note: -The lamp must be installed by professional electrician
-Ensure the power supply is switched off before fitting this product

-Do not touch the lamp when in use
-Keep away from hot steam and corrosive gas